



T4B KEY FOB GUIDE

Simple instructions for easy use



UNLOCK

Press once to unlock the scooter.

This also disarms the alarm.



POWER / START

Press once to turn the scooter on.

The scooter is ready to use.



LOCK / ALARM

Press once to lock the scooter.
Press and hold for 2 seconds to activate the alarm.

This is the same bottom button for both lock and alarm.



IMPORTANT

If the scooter was started using the remote start function, you cannot turn it off with the physical key.

Press the **UNLOCK** button on the key fob to turn the scooter off.